

## Care & Cleaning Instructions 220/320

The shuttle assembly should never be cleaned with abrasive cleaners.

### Cleaning Instructions:

1. Turn off hot and cold water supplies.
2. Loosen set screw and remove screw and knob
3. Temporarily place pointer on spline and turn LEFT to maximum "HOT" position. Unscrew cover and remove complete interior assembly.
4. Remove, shuttle assembly, return spring and submerge in non-corrosive cleaning solution and flush with clean water.
5. Reinstall return spring and shuttle assembly with cover.

