

## Care & Cleaning Instructions

### M-10C, M10-CST, M15-C, M-20C, M20-CST

#### Cleaning Instructions:

1. Remove snap caps, screws, washers, on both 4 arm handle and pointer.
2. Remove flange screw, remove flange.
3. Turn off hot and cold water supplies.
4. Remove cover with complete thermostat and bridge assembly, submerge in non-corrosive cleaning solution and flush with clean water.
5. Re-install complete assembly into body of valve, aligning holder nuts into holes in base.
6. Re-install, flange and flange screw.
7. Re-install pointer and 4 arm handle with screws, washers and snap caps.

